

LED PAR WATERPROOF 7X10W

1. Display:



A B C D

- A. MENU
- B. up
- C. Down
- D. Enter
- E. LED display

2. LED display functions, (choose a function and press D to confirm)

No	Display	Functions
1	A001	8CH mode address, (001—512)
2	D001	4CH mode address,(001-512)
3	CC 50	Color Jump, (01—99) Press B、 C to change speed
4	CP 50	Color fader, (01—99) Press B、 C to change speed
5	DE 50	Color changes, (01—99) Press B、 C to change speed
6	BEBE	Color change by sound
7	R255	R, (000—255)
8	G255	G, (000—255)
9	B255	B, (000—255)
10	W255	W, (000—255)

3. DMX512 8 CH mode

No	Function	remark
1	Dimmer	brightness from low to high
2	Strobe	From slow to fast
3	Functions	0—50: DMX ; 51—100: jump colors; 101—150: color fader; 151—200: color changes; 201—255: sound
4	Function speed	From low to fast
5	Red	0 - 100%
6	Green	0-100%
7	Blue	0-100%
8	White	0-100%

4 DMX512 4 CH mode

No	Function	remark
1	Red	0 - 100%
2	Green	0-100%
3	Blue	0-100%
4	White	0-100%

5. Advantages:

Operation is easy, Linear dimming,no flicker,no shake。 Friendly to the camera。