

User Manual



700W LED Follow spot

Brief introduction

Introduction-----	2
Statement-----	3
unpacking and installation-----	3
Product Description-----	3
Technical parameters-----	3
Control mode-----	4
Attention-----	5
Maintenance and repair-----	5
Repairing card-----	6

Welcome you to purchase and use 600W LED Follow light, please read this manual carefully before using the products.

[statement]

The product has passed all the test of company's test departments before sale, it is a qualified products, when you receive the products, please check the products and the packing is intact, then open the package, and check the accessories is complete.

[unpacking and installation]

please put the package on the flat ground up according the up mark on the package, open the packaging , and take out the accessories carefully, please holding the light's handle when you take out the light, then put the light on the flat ground,

[product description]

700W LED Follow Spot Light with high-power LED chip. Suitable color temperature, high color rendering. Light body with all-aluminum materials, volume small size with light-weight, high brightness. High-power fan cooling system to ensure the safety LED Chip, can stability of continuous work. The lights can Close-up of the characters and scenery in stage lighting, theater, film and stadiums and other places

[Technical parameters]

- Power supply: AC220V-240V / 50-60Hz power: 800W

Color temperature: 3200K / 4500K / 6500K

Light source: LED 700W module lamp bead using imported chip life up to 25,000 hours

One key control open foam, power restart, the recommended interval of more than 10 seconds

Beam angle: 4.5 ° to 15 °

Color: This product has white light plus red, rose red, blue three color changes

CRL> 90

0-100% linear dimming

Magfication: linear electron amplification

Focus focus: linear electronic focus

Aperture: Putter to adjust the aperture size, the clarity of manual adjustment

Strobe: 1-11 times per second;

projection distance: 10-60 m

Heat dissipation system: using six 8 mm thick copper pipe heat conduction through 132 large area of aluminum sheet heat dissipation, to ensure the heat dissipation of LED lamp beads, so that the light decay in the normal range, to ensure the life of the lamp beads

Overheat, trigger high pressure protection, using a new aluminum alloy exterior design, arc body beautiful and generous

The product is equipped with high load-bearing, high appearance level bracket, convenient installation, improve work efficiency

Body size: 787.4 * 193 * 220mm

Net body weight: 17.2KG

Carton size: 93 * 35 * 32CM

Lamp carton packing lamp weight: 18.3KG

Stent size (carton): 102 * 17 * 17CM

Support weight (excluding carton): 6.15 KG

Support weight (including carton): 6.7 KG

Airway case size: 1150 * 460 * 420MM

Airway case weight: 20.4KG

Total weight of Airway case package: 43.75KG

Panel control:

1. All the led bright after connect power, the follow spot light start reset, all the led light extinguished after complete reset.
2. The panel control button corresponds to the color wheel, use the button to choose the color.
3. Press the black button on the panel to make the fader effective;
4. The first push rod corresponds to dimming;
The second push rod corresponds to the color wheel;
The third push rod corresponds to the IRIS;
The fourth push rod corresponds to strobe;
The fifth push rod corresponds to zoom;
The sixth push rod corresponds to focus;

Control mode:

When the DMX signal input, the DMX control mode takes precedence; OLED display can adjust the DMX address

channels	function	value
1	COLOR	Every fifty values corresponds to a Color;
2	DIMMING	0--255
3	STROBE	0-9 Shut down, 10—255, low to fast
4	IRIS	0--255
5	zoom	0--255
6	focus	0--255

[Attention]

Warning! The beam moving head light is used by professionals. Non-professionals do not use it alone in case of danger.

The following unhealthy phenomenon will appear for improper use. The leakage of case will appear for the bad connection between power and ground. The ultraviolet rotation from the light source, the explosion of bulb and the poor lamp holder will caused the falling of the body of light.

Reading the manual carefully before you turn on the power and installation the light. Following all the safety precaution, following instruction and all the warning.

Prevent the electric shock.

Please cut the AC power when you replace bulb, fuse, any other parts and not in use.

Keeping good grounding state between power and ground wire.

Comply with the power stand of specification requirement and install the grounding facilities that with overload protection device.

Prevent the attack by ultraviolet radiation and bulb explosion.

Don't operate the moving head light that direct emit strong light don't through optical lens filter.

Turn off the power source and ensure the temperature of light not obviously higher than environment temperature.

Don't straight look at the bright mouth of light

Prevent from person burns or field on fire

Don't make the directly short circuit between temperature control switch and fuse.

Renewal the detective temperature control switch or the fuse as the original type.

Keep the flammable materials (alcohol, gasoline, paper) away the light at least 1 meter. In case to ignite other flammable object for the over temperature of light body.

It can't close fire for long time in 1 meter. For the light not belong to non-combustible materials.

Don't put filter or other items on the three lens of the light.

The surface of the light will become hot after long time using. So you exchange the bulb or other parts until it cooling to the room temperature.

Do not repair or installation the light by use of the accessories that not approved by the original factory.

Do not use the light when the around temperature over 40 degrees.

Prevent the accident for the falling of the light

Do not raise the light alone

Don't use the light hook and fixture that don't meet the requirement of instruction manual.

Set up barriers around the work area whenever you installation or take down the light and prevent the non-operate enter.

[Maintenance and repair]

- **Attention**

Regular level 3 maintenance of light

Check the tension of screw firmness that operating within the light (color dish's fixed screw)

Clean up the dust and debris and keep the light clean.

Clean the glass lens within the light (reflectors, color piece, corrugated mirror etc.)

The excessive dust, smoke and particles can be eroding appearance of light even damage equipment for overheating

Off the power before detach shell of light

- **Cleaning**

Disconnect the power, cool light completely. Remove the lamp cover.

Use a vacuum cleaner or air compressor produced gas to remove the dust of surface of light.

Optical lens need clean every week, or it will reduce brightness.

Cooling fans need clean monthly. Ensure the vent fan smooth to ensure the cooling effect of the bulb.

Check gas nets, such as clean up jam filter, change filter gas nets when needed.

The clean of gobo must use soft brush. Light internal clean at least six months, can use the vacuum cleaner or air compressor produced gas removal dust.

Color pieces, gobo pieces and the optical mirror need to clean monthly.

Clean optical element be careful, It is easy to stroke and damage of optical components surface, don't using liquor, it may damage the coating surface of optical lens.

In order to ensure the normal function of gobo wheel and focus, we suggest add lubricating oil in the bearings every six months. Remember: oil cannot too much, especially the gobo wheel, or it will cause other problems for the oil would flow when gobo wheel or gobo rotation.

Clean PCB board every three months (too much dust and dirt can lead to PCB work un-normal); Please with soft brush or air compressor produced gas to remove dust (air pressure can not be too strong).

Lamps and lanterns without any useful things except bulb insurance tube,

Please installation and replacement bulbs according to the instructions of the manual.

☐ Replace insurance pipe

If you want to change insurance tube, please replace with original (including current voltage, etc.)

Please draw power plug before replacement insurance pipe, avoiding dangerous!

Products guaranteed repairing card

Product name;	The product model:	Manufacturing date:
The final user :	Purchase date :	
Unit name :	distributor :	
To address :	contacts :	
Contact :	contact number :	
Contact number :	seal:	

Description: the above blank must be written by the final user and point of sale truthfully fill in, stamp, or without warranty.

Warranty: this product is guaranteed for one year since the acquisition date.

The warranty terms:

1, Under the condition of normal usage within the warranty period, any breakdowns caused by our products' own quality can get the free repair from our designated service center or production factory department by showing the warranty card and effective documents(or copies), according to this warranty terms,.

2, Under warranty, the following circumstance will implement compensated maintenance services.

- (1) cannot show the effective warranty card,
- (2) the warranty card with leakage remember, alteration and no sales names;
- (3) fault and damage are caused by force majeure;
- (4) fault and damage are caused during the transportation or move of discharge;
- (5) the damage is caused by the inappropriate usage because of not according to the instructions;
- (6) the damage is caused by without manufactures' authorization or non-professional workers who remove, Repair, or refit the products .
- (7) due to the use of the approved or not factory matching lost not fill control system and cause trouble.
- (8) consumables (bulbs)

3, warranty card please safekeeping.